GRAFF OF NEWARK LTD

SAPPHIRE 3

USB Flash and SD card Player

OPERATING INSTRUCTIONS

GEM

BRITISH MANUFACTURERS AND SUPPLIERS OF HIGH SPEED AUDIO DUPLICATORS, RECORDING EQUIPMENT AND BLANK RECORDING MEDIA

Introduction

Thank you for purchasing the Graff Sapphire 3 media player, please take a few moments to read this manual to familiarise yourself with the controls. If you experience any problems, please refer to the FAQ section on page 5 of this guide.

Box Contents

1) GEM Sapphire 3
2) AC Adapter
3) This user guide
4) Remote controller

Sapphire 3 Location of Parts

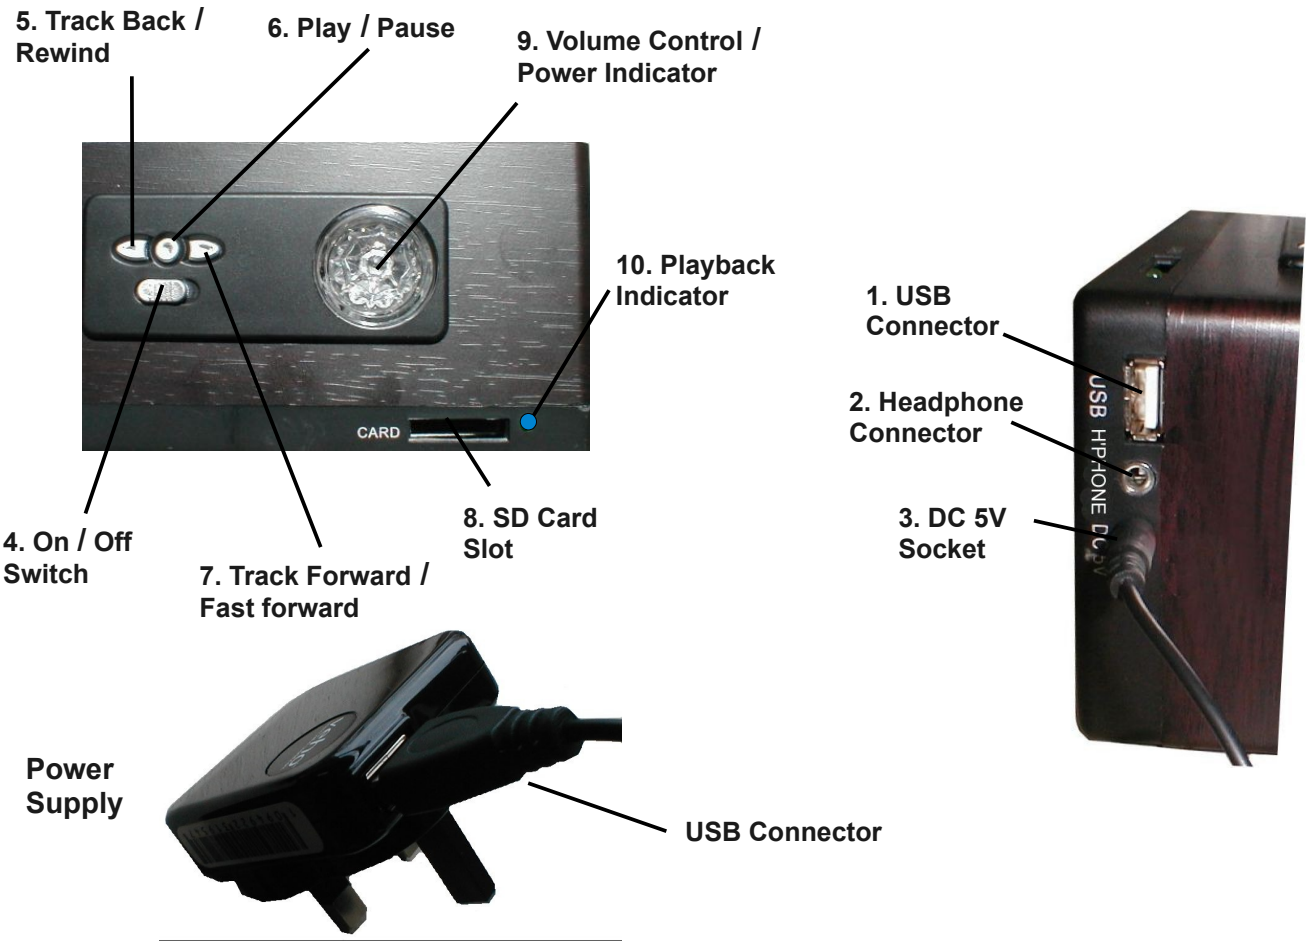

General

Your Sapphire 3 is fitted with an internal re-chargeable battery, it is recommended that you fully charge the battery for at least three hours before first use.

Charging the Battery

Use the enclosed power supply/charger. Plug one end into the mains supply. Plug the other end into the socket marked “DC5V” on the Sapphire 3. Normal charging takes approximately 1 ½ hours. It is not necessary to switch the player on to charge it.

Note: The media player can be used whilst the battery is being charged, however, if the battery is completely discharged we recommend charging for 60 seconds before inserting your memory device.

Operation

1) To apply power to the Sapphire 3, slide the on/off switch (4) to the right. The blue “power on” indicator will illuminate inside the volume control.
2) Insert your memory device containing mp3 files into the appropriate socket (USB or SD)

Note: Your memory device is designed to fit into the appropriate socket one way only. If resistance is felt turn the device round and try again. The diagrams show the correct orientation.

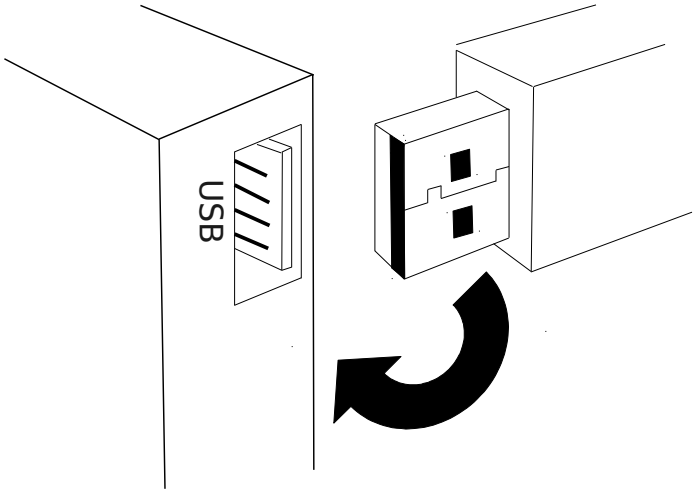

USB Stick orientation

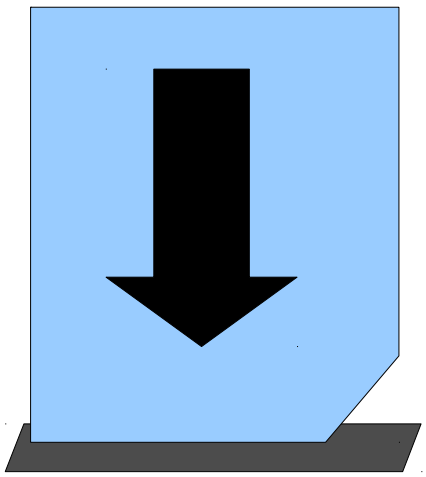

SD Card orientation

Controls

Track forward ►►(7):- Momentarily press this button to play the next track.

Track Back ◄◄(5):- Momentarily press this button to play the previous track.

Play/Pause ►/ ‖ (6):- Momentarily press this button to pause the current track. Press again to resume playback.

Advanced Features

1) Holding down Track Forward (7) and Track Back (5) Buttons for longer than 5 seconds will fast forward or rewind within the track that is currently playing.

2) Holding down the Play/Pause button for longer than 2 seconds will change the playback between the SD card and the USB drive. If you change mode accidentally, normal playback can be resumed by holding down the pause button for approximately 4 seconds or by turning the power switch off and after approximately 4 seconds, back on.

Headphones

A 3.5mm headphone socket is provided on the right hand side of the Sapphire 3.
When using headphones, ALWAYS turn down the volume control to a low level before connecting. Once connected, increase the volume to a comfortable listening level.
The Headphone volume can be adjusted using the volume control (9),

WARNING: Prolonged use of headphones with high volume settings can lead to permanent hearing damage.

Audio Stored in Folders

During standard playback the Sapphire 3 will play all of the tracks in one folder before progressing to the next.

FAQs

Question	Answer
When I switch on the Sapphire the blue power light does not come on.	The battery is flat. Try charging the battery using the power adaptor.
I have charged the battery but the indicator light is still not on.	Ensure the power adaptor is plugged into the correct socket on the Sapphire (marked **DC5V**).
There is no audio and the blue playback indicator is not flashing.	Ensure the memory device is correctly inserted, check the pause button has not been pressed. Check the audio files on the device are in **mp3** format. Turn the sapphire off for 10 seconds then back on.
There is no audio but the blue playback indicator is flashing.	Ensure the main volume control is turned fully clockwise. Hold down the volume + button on the remote control to increase the volume.
The quality of the audio is poor.	Try changing the “EQ” setting via the remote control.
My remote has no effect on the Sapphire.	Ensure the battery has been activated by removing the cellophane strip at the base of the remote. Replace the battery if necessary.
A short section of audio keeps repeating on battery power.	The battery is flat. Recharge the battery.

Note: Switching the Sapphire player off and back on rapidly can cause loss of play back and functionality. In the event of this happening, switch the sapphire to the off position for 10 seconds before switching back on.

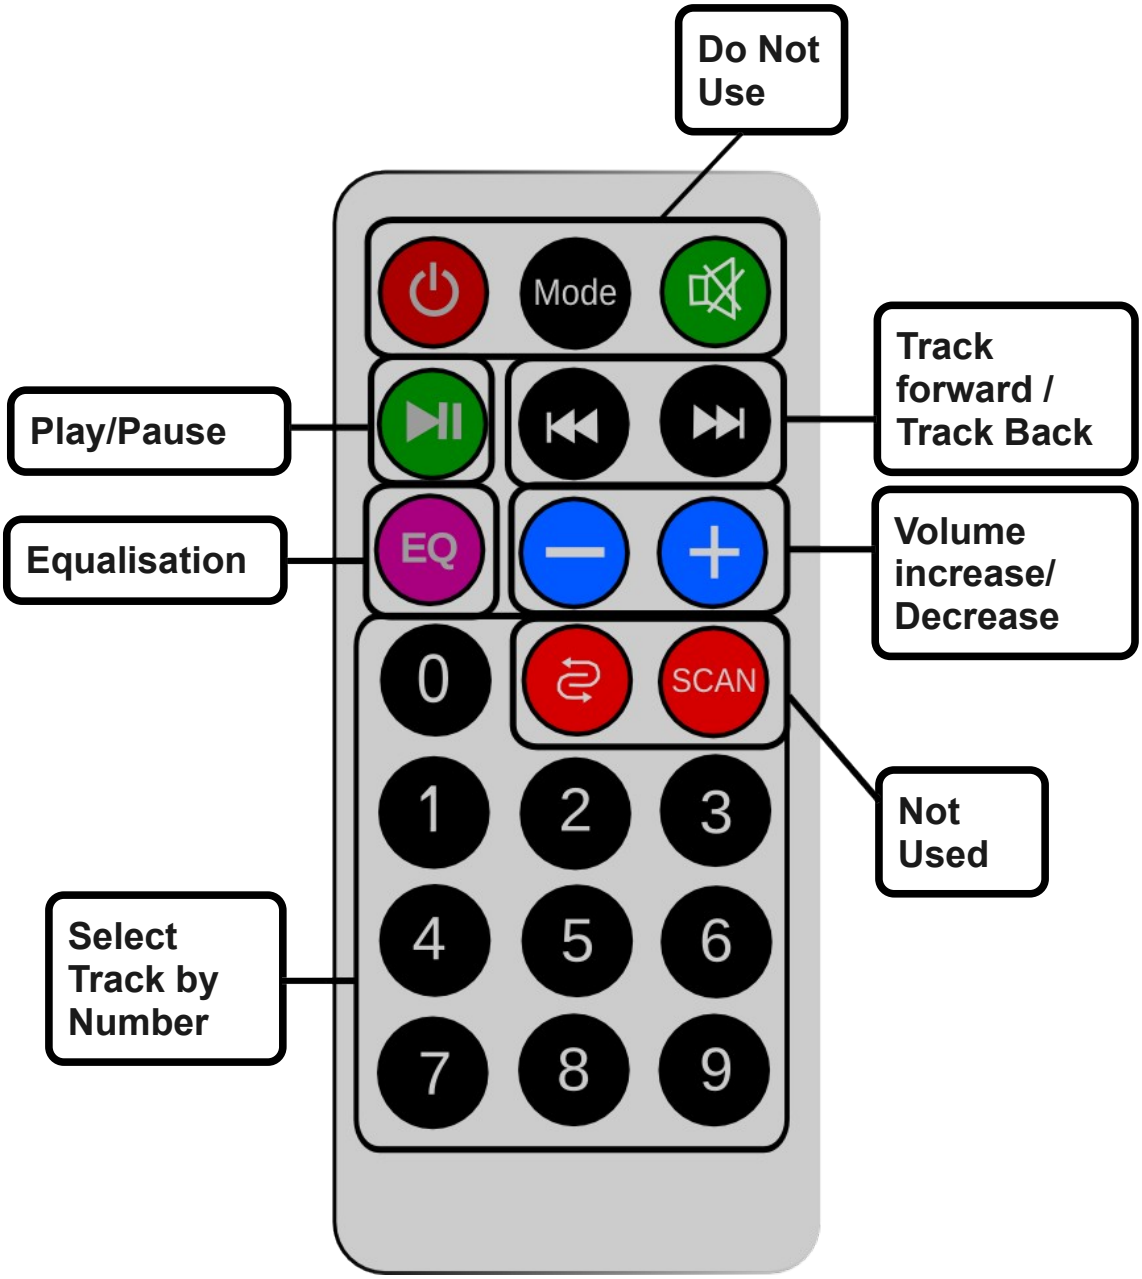
Do Not Use
Mode
Track forward / Track Back
Play/Pause
Equalisation
EQ
Volume increase/ Decrease
0
SCAN
Not Used
1
2
3
Select Track by Number
4
5
6
7
8
9

Remote Control Operation

On first use, enable the remote control battery by pulling out the strip of cellophane at the bottom of the remote control.

Track forward/back

Back ◄◄ Press the Track Back button momentarily to play the previous track.
Forwards ►► Press the Track Forwards button momentarily to play the next track.

Play/Pause

►/ ‖ Press the play/pause button momentarily to pause playback and to resume playback.

Volume Increase/Decrease

Press and hold the **–** button to decrease the volume until the desired level is achieved.
Press and hold the **+** button to increase the volume until the desired level is achieved.

Equalisation

There are six pre-set equaliser settings to increase your listening pleasure. Pressing the EQ button cycles through the pre-sets.

Track Select Buttons

You can move directly to the track of your choice by keying in the number of the desired track.
Pressing (1) then (2) will select track 12.

Please note: The battery compartment on the rear of the unit is normally empty and can be used to fit a replacement should the internal battery fail. It can also be used to fit an additional battery if required. Which will double the playing time after charging
Graff Part No TN00005

Remove the battery cover and Insert the new battery as shown.

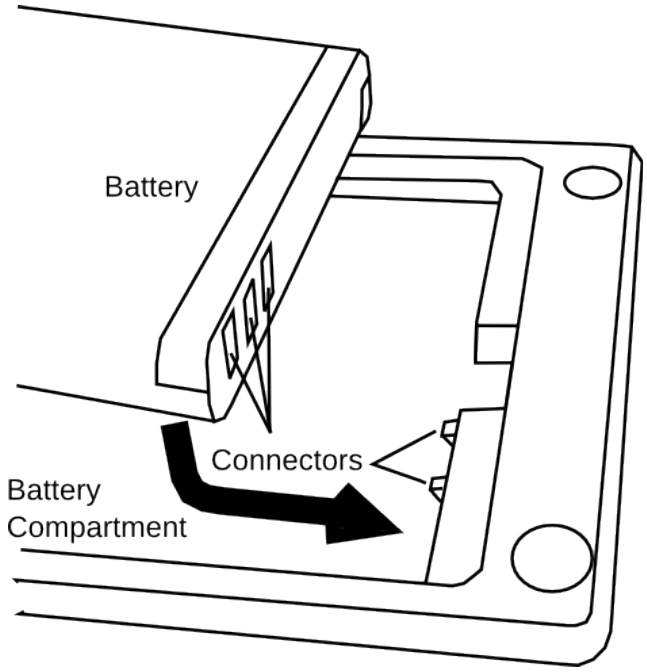

SAPPHIRE 3

For Technical assistance Please Contact:

GRAFF OF NEWARK LTD.
Woodhill Road,
Collingham,
Newark
Notts. NG23 7NR,
United Kingdom.
Telephone: +44 (0)1636 893036
Facsimile: +44 (0)1636 893317
Email: sales@graffofnewark.co.uk
Website: http://www.graffofnewark.co.uk

WARRANTY

Your Sapphire 3 model (excluding the battery) is covered by 1 years' parts and labour warranty against electrical and mechanical defects due to faulty materials or workmanship

This warranty does not apply to any parts that become unserviceable through accident, misuse or neglect, repairs attempted by unauthorised persons, use on power supplies other than that specified in the user manual and normal wear and tear.

Any repairs or parts replacement required under the terms of the warranty due to faulty materials or workmanship will be made free of charge during this period

The warranty does not cover any damage occurring to machines in transit to the factory due to poor or unsuitable packaging.

Malfunction or damage caused by the use of unsuitable or poor quality media is not covered by this warranty.

The Battery installed in the Sapphire is covered by 6 months warranty against total faliure during the warranty period.

This warranty does not affect your statutory rights

CE RoHS

GEM

BRITISH MANUFACTURERS AND SUPPLIERS OF HIGH SPEED AUDIO DUPLICATORS, RECORDING EQUIPMENT AND BLANK RECORDING MEDIA